


Instruction Sheet

Digi-Pulse™ Flow Monitor Installation




WARNING:

The valve fitting on the discharge portion of the Digi-Pulse™ Flow Monitor must be a flange type fitting to ensure a proper seal with the O-Ring. Using a winged type valve fitting will not create a seal and leakage of solution will occur.

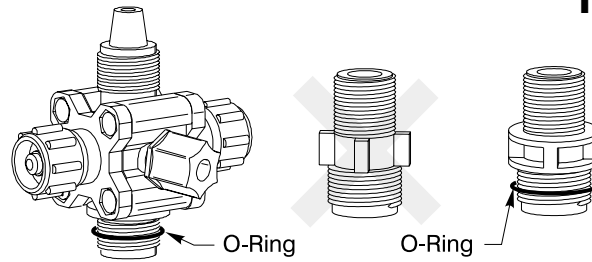

1. With your pump turned off, screw the lower valve fitting of the Digi-Pulse™ Flow Monitor to the discharge side of the pump head.
2. **FM-200 and FM-200-9:** Remove the yellow Caplug from the top of the Digi-Pulse™. *Be sure to save the O-Ring seal and install it onto the mating end of the valve housing or 4FV you will be using.* Attach your 4FV or valve housing to the top of the Digi-Pulse™.
3. **All other models:** Attach tubing to top of valve housing.
3. Connect the Digi-Pulse™ cable to your counter, computer, or other recording device (polarity is not critical). If cable extension is desired, consult factory. Plug the FM-200-9 cable directly into the receptacle in the Series A9 pump housing.

4. Loosen the locknut of the flow-range knob of the flow monitor and set the knob to the largest dot. Start the pump and adjust it (calibrate, if necessary) for proper output to satisfy your system requirements.
5. With the pump running, gradually turn the adjustment knob of the flow monitor counter-clockwise  until the sensor just begins to trigger your electronic device.

This will be the most sensitive setting of the Digi-Pulse™, given your pump setting and fluid properties. Every stroke of the pump will output enough volume of solution to cause the Digi-Pulse™ flow monitor to register a pulse. If the flow drops below the initial pump setting, the Digi-Pulse™ will no longer register strokes to your electronics, indicating some type of pump failure or low-level condition.

6. Tighten the adjustment locknut without altering the adjustment position.

Note:

After the initial pump and Digi-Pulse™ setup is complete, any adjustment of the stroke length of the pump (output per stroke) will require a readjustment of the Digi-Pulse™ Flow Monitor (repeat steps 4 - 6 above).

To change the flow range setting:

A set screw holds the transmitter body in a notch on the side of the flow monitor. Remove the screw and washer and slide or turn the transmitter 180° to an alternate position and tighten the screw and washer in the hole to secure the transmitter. The Digi-Pulse™ Flow Monitor comes factory set at the “LOW” setting which should accommodate most applications. However, the “INTERMEDIATE” or “HIGH” settings may be appropriate for a particular application if the sensor does not trigger in the “LOW” setting.

